

Modular Hi-Rise Replacement Series – MIY

INSTALLATION, OPERATION, & MAINTENANCE MANUAL



MINI*ReStora*MOD™



Build Your Reputation on Ours

Modular Hi-Rise Replacement Series – MIY

INSTALLATION, OPERATION, & MAINTENANCE MANUAL

Warnings and Cautions

1.  No attempt should be made to handle, install, or service any unit without following safe practices regarding mechanical equipment.
2.  **WARNING:** Wear eye, hand and limb protection at all times during demolition and installation.
3.  **WARNING:** Have appropriate permits and staffing present for brazing, sheet metal work, wiring, etc.
4.  **WARNING:** Disconnect electrical service at breaker panel, and lockout appropriately. Be sure that electrical wires do not make contact with any other conductive surfaces.
5.  **WARNING:** Locate cold and/or hot water isolation valves, and turn-off all supply water to coil(s). If isolation valves fail to completely close, it may be necessary to depressurize risers below the floor being renovated; and replace isolation valves before proceeding with re-pressurization and demolition.
6.  **CAUTION:** Pressurized hot water can scald or spray into your eyes, causing permanent injury.
7.  **CAUTION:** Toxic residues and loose particles resulting from manufacturing and field piping techniques such as joint compounds, soldering flux, and metal shavings may be present in the unit and the piping system. Special consideration must be given to system cleanliness when connecting to solar, domestic or potable water systems.
8.  **CAUTION:** Hose connection torque requirements are 350 in. lbs. +10/-0 in. lbs. to prevent leaks, and incidental damage from over-tightening.
9.  All installations should be made in compliance with all governing codes and ordinances. Compliance with all codes is the responsibility of the installing contractor.
10.  The manufacturer assumes no responsibility for undesirable system operation due to improper system design, equipment or component selection, and/or installation of ductwork, grilles, and other related components.
11.  All field wiring should be done in accordance with governing codes and ordinances. Any modification of the unit wiring without factory authorization will void all of the factory warranties and will nullify any agency listings.
12.  The manufacturer assumes no responsibility for any damages and/or injuries resulting from improper field installation and/or wiring.
13.  Proper safety procedures should be followed regarding ventilation and safety equipment. The manufacturer's directions should be followed for the products being used.
14.  **CAUTION:** The air vent provided on the unit is not intended to replace the main system air vents and may not release air trapped in other parts of the system. Inspect the entire system for potential air traps and vent those areas as required, independently. In addition, some systems may require repeated venting over a period of time to properly eliminate air from the system.
15.  Failure to provide proper water quality will void the fan coil unit's warranty.

It is the responsibility of the end user to properly characterize and dispose of all waste materials according to applicable regulatory and legal entities. Where reasonable, safe, and compliant with local regulatory and legal requirements, IEC encourages recycling materials when disposing of its products.

International Environmental Corporation (IEC) works continually to improve its products. As a result, the design and specifications of each product may be changed without notice and may not be as described herein. Please contact IEC for information regarding current design and product specifications. Statements and other information contained herein are not express warranties and do not form the basis of any bargain between the parties but are merely IEC's opinion or commendation of its products. Manufacturer's standard limited warranty applies.

Table of Contents

2	Warnings and Cautions	20	Water Treatment
SECTION ONE — Receipt, Unpacking, & Inspection		20	Water System Balancing
4	Receipt	20	Controls Operation
4	Unpacking and Inspection	SECTION FIVE — Routine Maintenance	
5	Handling	21	Motor/Blower Assembly
6	Potential Unit Configurations	21	Coils
7	Special Arrangement Options	22	Electric Resistance Heater Assembly
SECTION TWO — Product Line Specific Demolition & Installation		22	Electrical Wiring and Controls
10	Demolition, Step-by-Step Guide	22	Valves and Piping
11	Installation	23	Filters, Throwaway (including MERV)
14	Riser to Unit Installation	23	Filters, Permanent
14	Riser to Drain Installation	23	Drain
SECTION THREE — Finishing Installation		24	Replacement Parts
15	Grille/Ductwork Installation	SECTION SIX — Checklists	
15	Electrical Connections	25	Receiving and Inspection
16	Exposed Unit Touch-up and Repainting	25	Handling and Installation
SECTION FOUR — Start-Up		25	Cooling/Heating Connections
16	Operating Conditions	25	Ductwork Connections
17	Cooling/Heating System	25	Electrical Conditions
17	Air System Balancing	25	Unit Start-Up
17	ECM Blower	25	Recommended Spare Parts (per 10 units)
18	Motor Control Voltage – 3-Speed Relay Board – Factory Settings	26 Terms and Conditions	
19	Motor Control Voltage – Proportional/Analog Thermostat Settings		

Modular Hi-Rise Replacement Series – MIY

INSTALLATION, OPERATION, & MAINTENANCE MANUAL

SECTION ONE — Receipt, Unpacking, & Inspection

Receipt

International Environmental Corporation fan coil units represent a prudent investment offering trouble-free operation and long service with proper installation, operation, and regular maintenance.

Your equipment is initially protected under the manufacturer's standard warranty; however, this warranty is provided under the condition that the steps outlined in this manual for initial inspection, proper installation, regular periodic maintenance, and everyday operation of the equipment be followed in detail. This manual should be fully reviewed in advance before initial installation, start-up, and any maintenance. Should any questions arise, please contact your local sales representative or the factory BEFORE proceeding.

The equipment covered by this manual is available with a variety of options and accessories. Consult the approved unit submittals, order acknowledgement, and other manuals for details on unit options and accessories.

The equipment must always be properly supported. Temporary supports used during installation or service must be adequate to hold the equipment securely.

All power must be disconnected before any installation or service is attempted. More than one power source may be supplied to a unit. Only a single, standard thermostat should be supplied power by the unit. Any other remote mounted device should NOT be powered by the fan coil unit.

Never wear bulky or loose fitting clothing when working on any mechanical equipment. Gloves should be worn for proper protection against heat and other possible injuries. Safety glasses or goggles should always be worn when drilling, cutting, or working with chemicals such as refrigerants or lubricants.

Never pressurize any equipment beyond specified test pressures. Always pressure test with an inert fluid or gas such as clear water or dry nitrogen to avoid possible damage or injury in the event of a leak or component failure during testing.

Always protect adjacent flammable material when welding or soldering. Use a suitable heat- shield material to contain sparks or drops of solder. Have a fire extinguisher readily available.

The manufacturer assumes no responsibility for personal injury or property damage resulting from improper or unsafe practices during the handling, installation, service, or operation of any equipment.

Unpacking and Inspection

All units are carefully inspected at the factory throughout the manufacturing process under a strict detailed quality assurance program, and, where possible, ALL major components and sub-assemblies are carefully tested for proper operation and verified for full compliance with factory standards. Operational testing of some customer-furnished components such as electronic control valves and digital controllers may be a possible exception.

Each unit is carefully packaged for shipment to avoid damage during normal transit and handling. Equipment should always be stored in a dry place. The deco panel should also be stored in the proper orientation as marked.

All shipments are made F.O.B. factory and is the responsibility of the receiving party to inspect the equipment upon arrival. **Any obvious damage to the contents should be recorded on the bill of lading and a claim should be filed with the freight carrier.**

After determining the condition of the packaging exterior, carefully inspect packaging for hidden damage. At this time, check to make sure that "furnished only" items such as thermostats, grilles etc. are accounted for, whether packaged separately or shipped at a later date. Any hidden damage should be recorded and immediately reported to the carrier and a claim should be filed. In the event a claim for shipping damage is filed, the unit, and all packing must be retained for physical inspection by the freight carrier. All equipment should be stored in the factory packaging with internal packing in place until installation.

SECTION ONE — Receipt, Unpacking, & Inspection, Cont'd.

At the time of receipt, the equipment type and arrangement should be verified against the order documents. Should any discrepancy be found, the local sales representative should be notified immediately so that proper action may be taken. **Should any questions arise concerning warranty repairs, the factory must be notified BEFORE any corrective action is taken.** Where local repairs or alterations can be accomplished, the factory must be fully informed of the extent and expected cost of those repairs **before work is begun.** Where factory operations are required, the factory must be contacted for authorization to return equipment and a Return Authorization Number will be issued. Unauthorized return shipments of equipment and shipments not marked with an authorization number will be refused. **In addition, any claims for unauthorized expenses will not be accepted by the manufacturer.**

Handling

The units covered in this manual are identified by a tag on top of the unit which shows the floor and /or room riser number for which each unit is designed. Units should not be installed at locations other than that marked on the unit identification tag. Should any questions arise regarding unit configuration, contact the sales representative or the factory BEFORE proceeding.

While all equipment is designed and fabricated with sturdy materials and may present a rugged appearance, great care must be taken to assure that no force or pressure be applied to the coil or piping during handling. Depending on the options and accessories, some units could contain delicate components that may be damaged by improper handling. Lifting or supporting the cabinet only at the top and bottom should be avoided to maintain the straight and square cabinet alignment.

The equipment covered in this manual **IS NOT** suitable for outdoor installations. The equipment should never be stored or installed where it may be subjected to a hostile environment such as rain, snow, or extreme temperatures.

During and after installation, special care must be taken to prevent foreign material such as paint, plaster, drywall

dust, or any other debris from being deposited anywhere in the unit, including but not limited to motor, blower wheels or coil. Failure to do so may have serious, adverse effects on the unit operation or user, and in the case of the motor and blower assembly, may result in immediate or premature failure. All manufacturer's warranties are void if foreign material is allowed to be deposited on the motor or blower wheels of any unit. Some units and/or job conditions may require some form of temporary covering during construction.

While the manufacturer does not become involved in the design and selection of support methods and components, it should be noted that unacceptable system operating characteristics and/or performance may result from improper or inadequate unit structural support. Due to variations in building construction, floor plans, and unit configurations, each installation is different. The actual step-by-step method of demolition and installation may vary from unit to unit.

Shipping screws and braces must be removed before the unit is installed.

Modular Hi-Rise Replacement Series – MIY

INSTALLATION, OPERATION, & MAINTENANCE MANUAL


SECTION ONE — Receipt, Unpacking, & Inspection, Cont'd.

Potential Unit Configurations


NOTE: Risers can not be installed on the Return Air side of the cabinet. (Front)

Figure 1. Air Arrangements



Single-side Supply

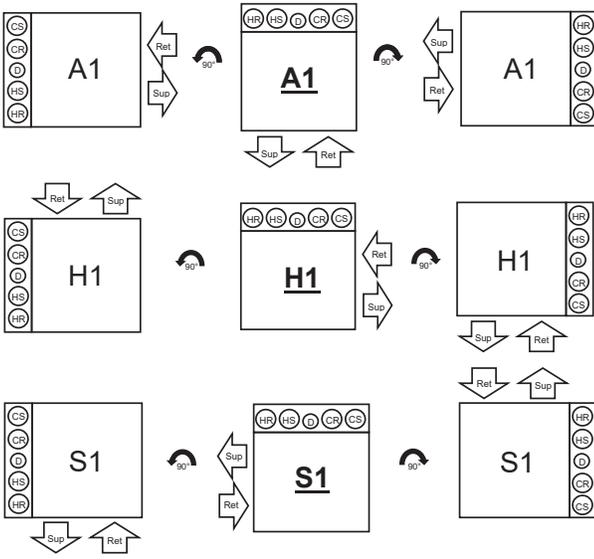

Top Supply Only

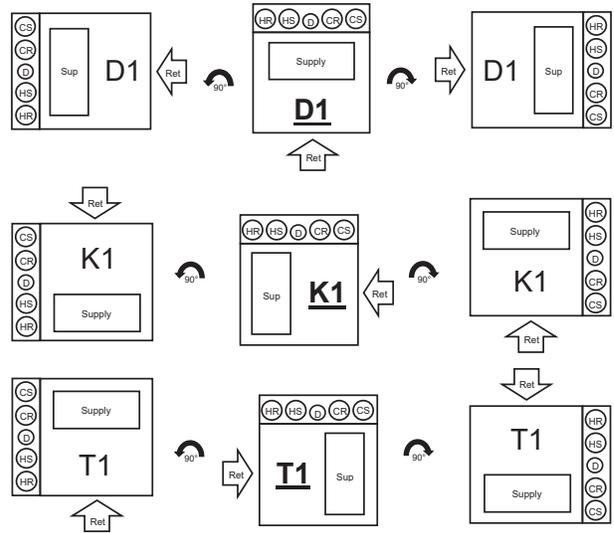

Single-side and Top Supply

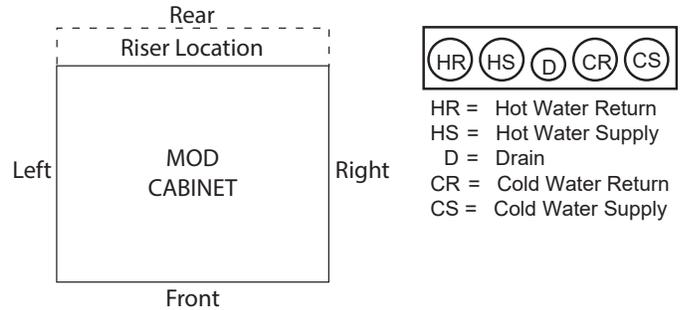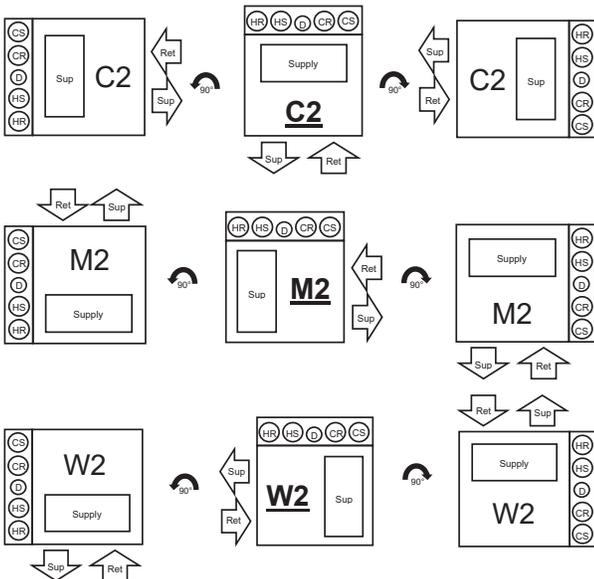


- NOTES:
1. Risers pictured are shown for reference purposes only and adhere to the IEC standard convention.
 2. MRY/MIY equipment is designed to use existing risers, so risers are typically not sold with these models.
 3. Riser supply-return configurations and temperature should be labeled prior to demolition, and must be verified prior to installation, as they may differ from the IEC standard convention.


SECTION ONE — Receipt, Unpacking, & Inspection, Cont'd.

Special Arrangement Options

Single-side Supply

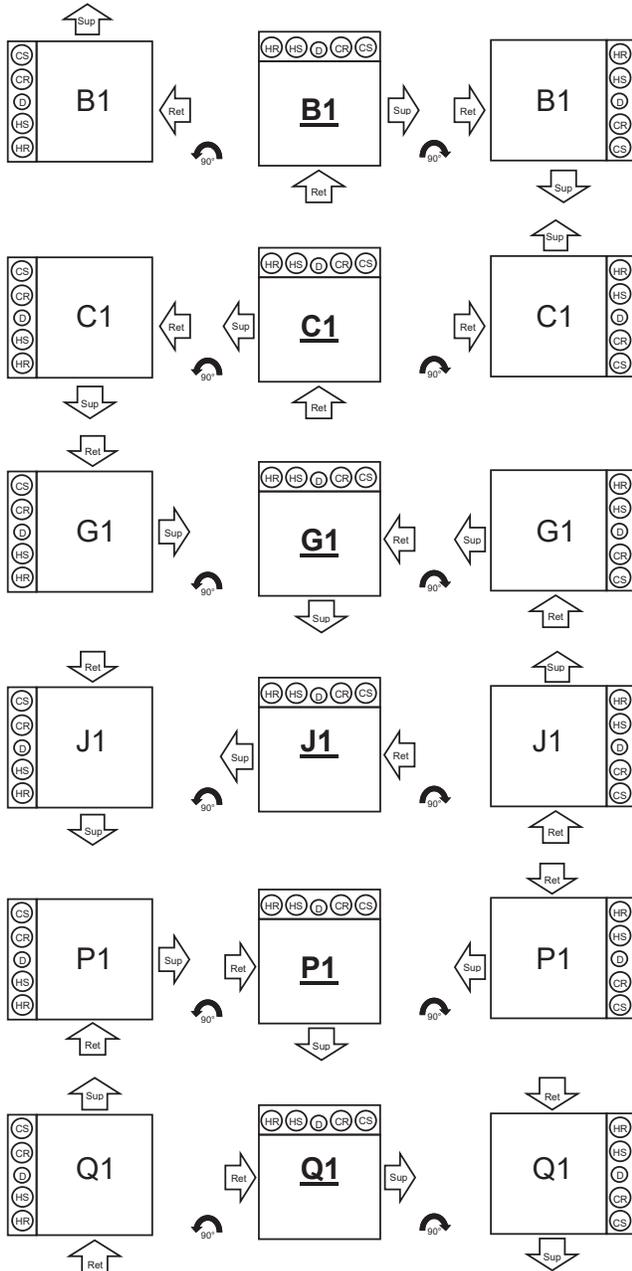

Single-side and Top Supply


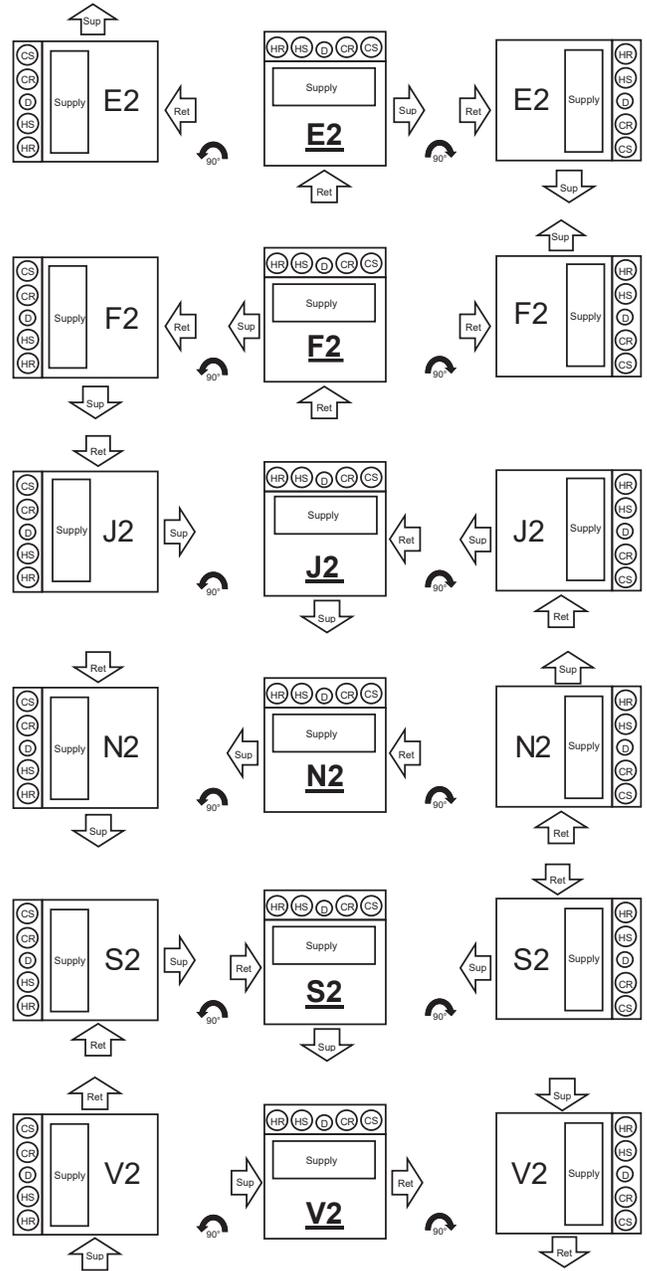


Special Arrangement Options (Cont'd on next page)


SECTION ONE — Receipt, Unpacking, & Inspection, Cont'd.

Special Arrangement Options

Double-side Supply

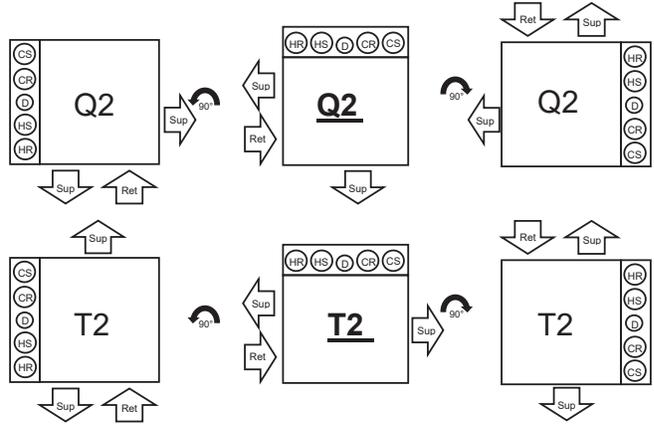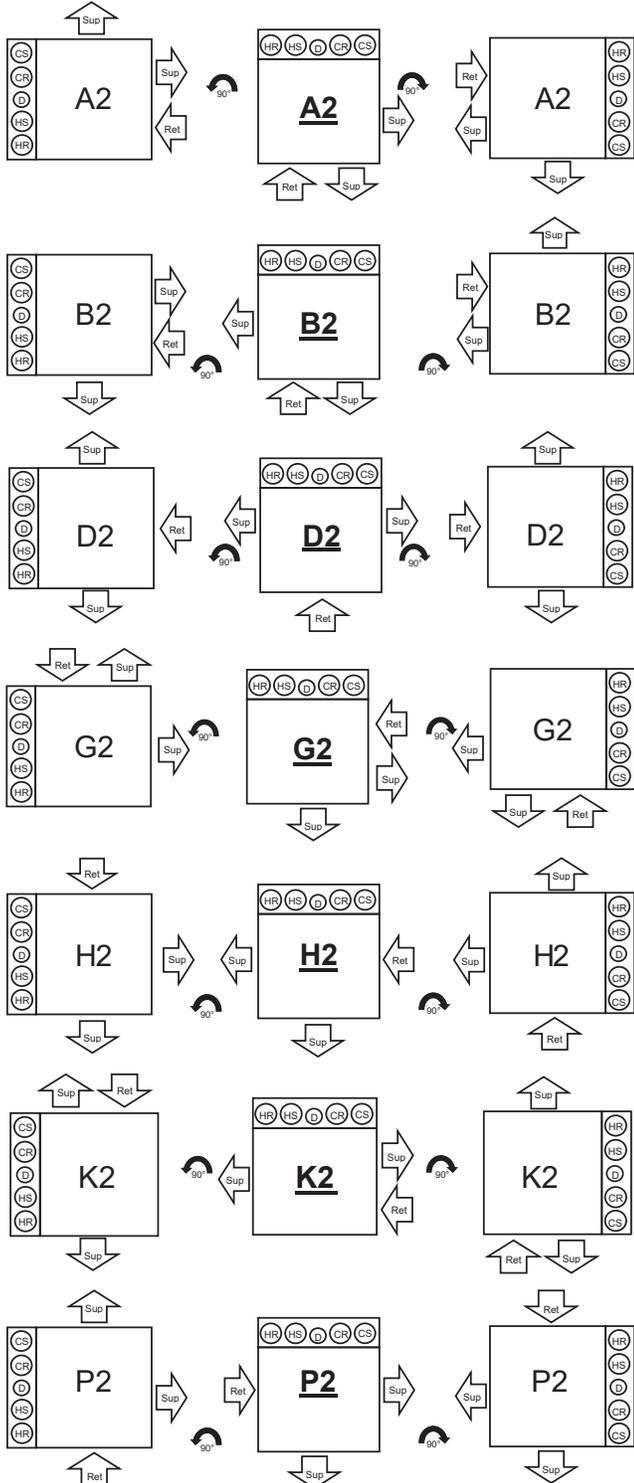


Double-side and Top Supply

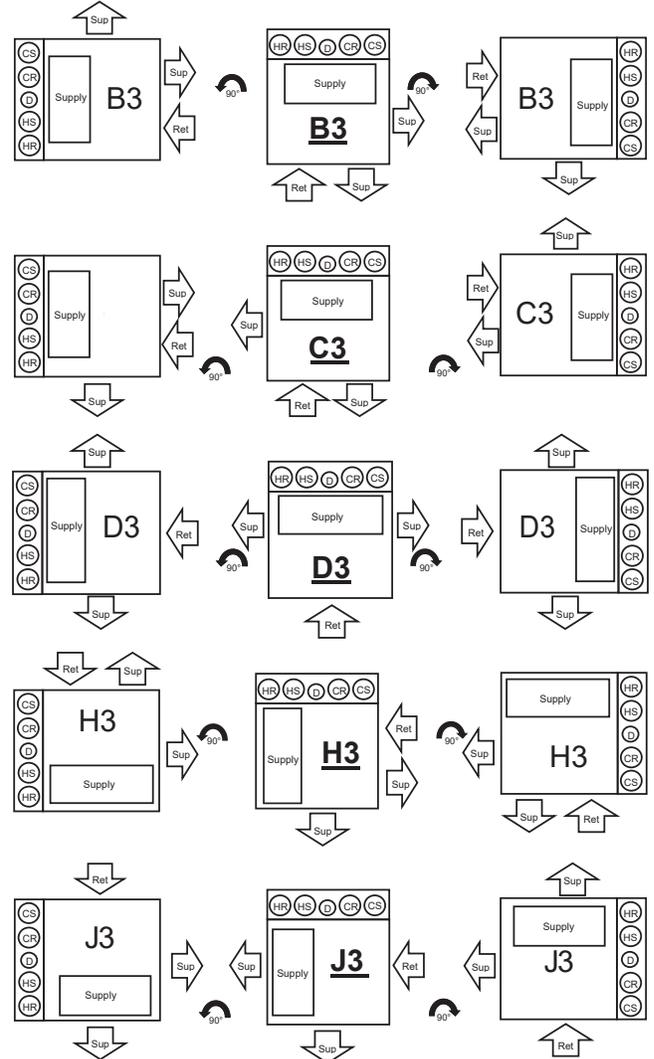

Special Arrangement Options (Cont'd on next page)

SECTION ONE — Receipt, Unpacking, & Inspection, Cont'd.

Special Arrangement Options

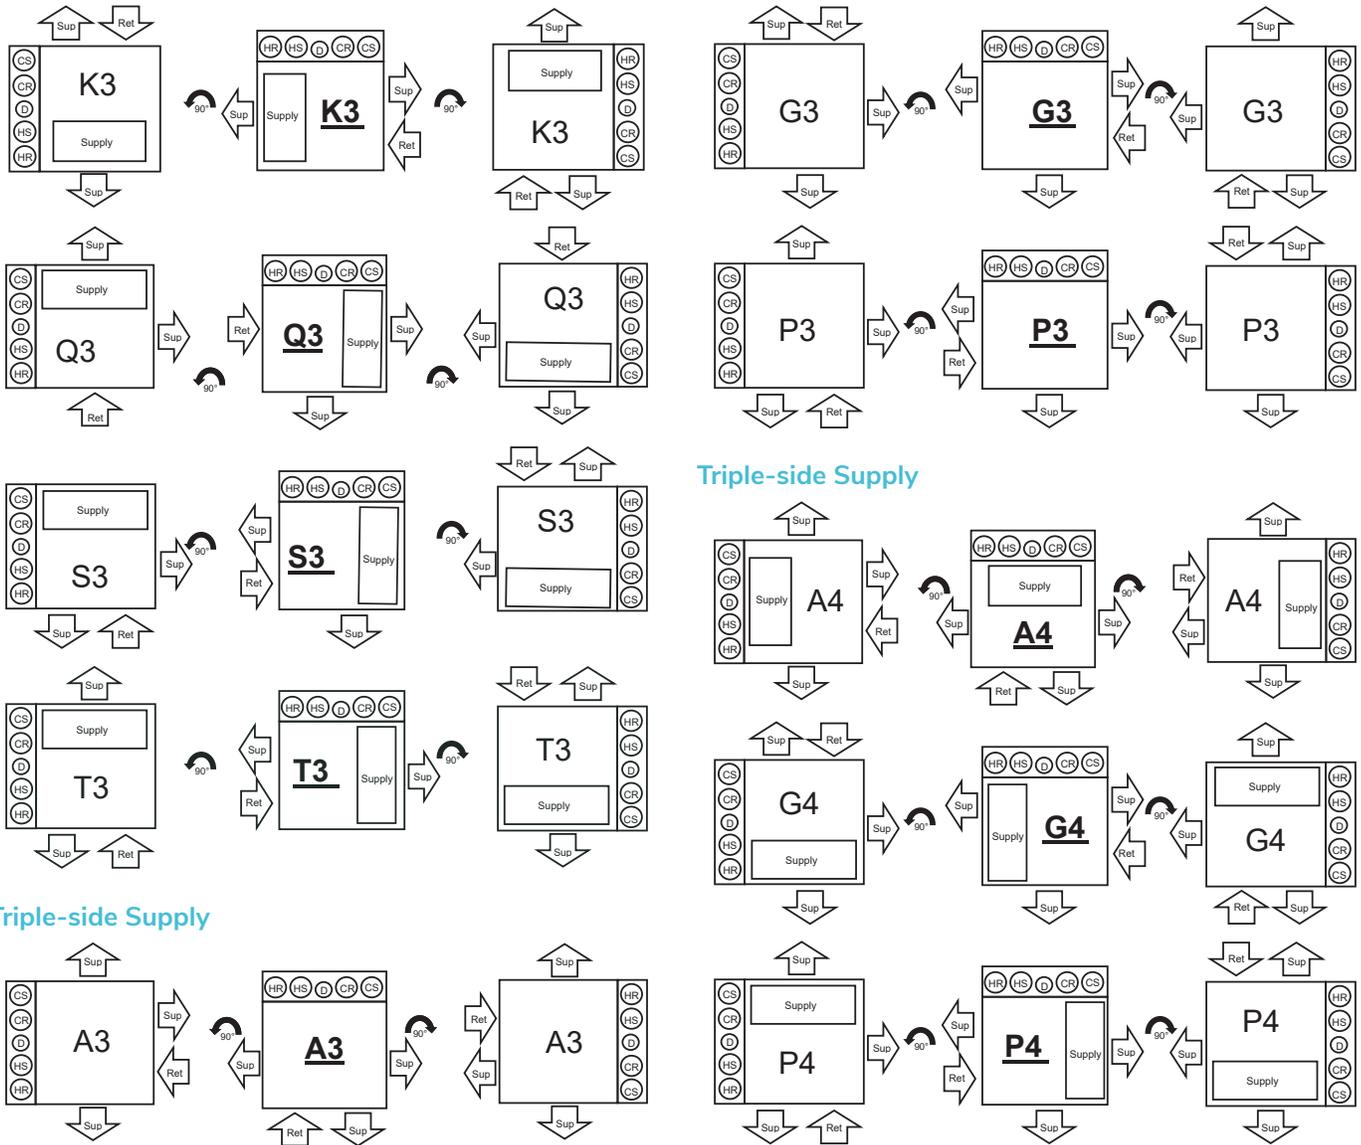

Triple-side Supply

Triple-side Supply

- NOTES:
1. For special supply/return arrangement options, please contact IEC for pricing and availability.
 2. Any special supply/return arrangement may affect sound and performance.
 3. Risers pictured are shown for reference purposes only and adhere to the IEC standard convention.
 4. MRY/MIY equipment is designed to use existing risers, so risers are typically not sold with these models.
 5. Riser supply-return configurations and temperatures should be labeled prior to demolition and must be verified prior to installation, as they may differ from the IEC standard convention.
 6. Special arrangements may require special supply grilles, baffling and lab testing to validate actual performance.

SECTION TWO — Product Line Specific Demolition & Installation

MINIReStoraMOD™

Demolition, Step-by-Step Guide

Recommended Supplies: drop cloths, plastic sheet coverings, utility knife/hole saw, shears/nibbler/reciprocating saw, small rotary pipecutter, brazing torch, pipe wrenches, straight edge-level, hammer, screw gun, chisel/pry bar and a pencil.

NOTE: Jobsites will vary greatly. The general demolition procedures listed here are intended as a recommendation only. A thorough evaluation of the jobsite should be done prior to ordering the fan coil units to determine any unique or additional steps that may be required in order to properly demolish an old unit and install a MIY.

WARNINGS: Page 2 (inside front cover) of this catalog MUST be carefully reviewed before any demolition and/or installation.

1. Adequately protect existing wall coverings (paintings, wallpaper, etc.), furniture, carpeting, and other surfaces when performing demolition and installation work.
2. Remove supply-air grille and return-air/front panel from existing unit.
3. Use a straight edge to outline drywall section for removal, which will expose the entire front-face of existing unit, apply painter's tape to achieve clean cut and prevent drywall damage.
Note: Typical area of drywall clearance for replacement will be 81.5" x 15.5" on most original units, although every application may vary.
4. Carefully cut drywall at outer edges of unit, along penciled outline, removing drywall from the floor to the top of existing fan coil unit to expose the entire front-face.
5. Cut and remove the upper-front, steel cabinet panel flush with the sidewall of the existing unit.

6. Cut copper supply and return pipes with rotary hand tool, leaving the ball valves and 1-2 inches of copper tubing to connect to new coil.
Riser supply-return configurations and temperature should be labeled prior to demolition, and must be verified prior to installation, as they may differ from the IEC standard convention.
7. Remove the upper coil support, coil, valve package and any other components easily with a screw gun.
8. Remove motor/blower assembly.
9. A hammer and chisel may be required to remove blower deck.
10. Remove all other components remaining in cabinet interior, so only a hollow, insulated, metal shell of original unit remains.
11. Use sheet metal nibbler to trim existing cabinet front-face flanges. Leave no more than 1/4" to 1/8" flange around perimeter of cabinet-front.

Figure 2. Use nibbler or reciprocating saw to remove flange material

NOTE – It is important to remove as much flange material as possible to minimize any interference with the new MINIReStoraMOD™ replacement unit.



12. Remove insulation from bottom of cabinet to prevent hang-up when sliding in the replacement unit
13. Clean inside of existing unit cabinet with vacuum, after removal of all components.

SECTION TWO — Product Line Specific Demolition & Installation, Cont'd.

14. Demolition complete.

NOTE: Any fireproofing requirements where risers or piping penetrate floors or walls are the responsibility of the installer. This work should be done only after all pressure testing is completed. The fireproofing method used must accommodate pipe expansion and contraction and the piping must be protected from abrasion and chemical attack. The pipe insulation also must be maintained to prevent sweating and must be protected from wear or erosion at the joint between the insulation and the fireproofing material.

NOTE: Flare fittings are factory provided to allow connection between the ball valve and the hoses.

Installation


1. Verify that power has NOT been restored to the installation
2. Remove the acoustical RA block-off panel that has the wiring diagram, and set to the side.
3. Verify that the new slide-in chassis circuit breaker (unit disconnect switch) is in the “OFF” position
4. Verify that any isolation and/or flow control valves will fit in the new chassis’ preconfigured riser slots
5. Remove the loose, perforated, riser insulation pad from the unit. Unscrew and remove the corner brace and riser access plate from the inside-rear of the new chassis cabinet, if present. These must be removed to slide chassis over existing riser stub-outs. Do not discard these items, as they will need to be used/replaced later in the installation process.
6. Verify that the existing riser stub-outs location matches the riser-entry cut-out section of the new unit (appropriate height and side/orientation).
7. Thoroughly check the old unit chassis and drywall cuts for any irregularities or protrusions that would prevent the new unit from sliding in, seating, and properly leveled.
8. Attach the louvered, deco panel frame onto the new slip-in replacement chassis. Be sure to remove the lower shipping brace (bar) from the deco frame before it is installed.
9. Align new slip-in unit with wall cavity and slide partially into place.
10. Route electrical conduit into slip-in through top or side, as appropriate for your application. Continue to make sure that this conduit does not become pinched or otherwise compromised, while sliding the new chassis into the old cabinet.
11. Carefully slide the new slip-in chassis, fully into the old cabinet. The deco panel frame should rest flush against the drywall surface around the cutout. It may be necessary to shim the new chassis to properly level it within the old cabinet.
12. Anchor the new chassis cabinet to existing cabinet with sheet metal screws, from inside new cabinet. Anchoring through the rear side of the cabinet helps to draw the louvered, deco panel frame and drywall together.
13. Re-install the corner brace and riser access plate, if removal was necessary in step 5. These items allow for pass-through of the existing riser stub-outs, and give the unit added support.
14. Remove backing from perforated riser insulation panel, and apply the sticky side to the inside wall of the new chassis, sealing around the riser stub-out penetrations. The pad prevents excessive air leakage into the riser chase.
15. Solder hose adapters, isolation or combo valves to the existing return and supply piping stubs. If combo valves are used, first verify that the correct valve is being used for that specific unit and supply/return stub-out.

SECTION TWO — Product Line Specific Demolition & Installation, Cont'd.

NOTE: Depending on valve geometry, such valves may be installed after the new chassis itself has been slid into position, and prior to attachment of the perforated, riser insulation block-off. Heat damage to insulation should be avoided.

16. Make mechanical service connections including, but not limited to: hot water supply (HWS), hot water return (HWR), cold water supply (CWS), cold water return (CWR), rubber p-trap to drain pan, and p-trap to riser-drain stub-out labeled during Step 6 of demolition.
17. Repressurize riser(s), if shut off during demolition; and verify that no leaks are present.
18. Purge water coils of air, after isolation valves are opened to allow flow. All models come with a manual air vent, at minimum.
19. Seal any remaining chassis openings as well as possible, to minimize air leakage that would adversely affect unit performance.
20. Make all high voltage electrical connections, followed by low voltage connections.
21. Reconnect electrical service at building breaker panel. Test unit operations and commission as required.

Figure 3. Acoustical RA block-off Panel

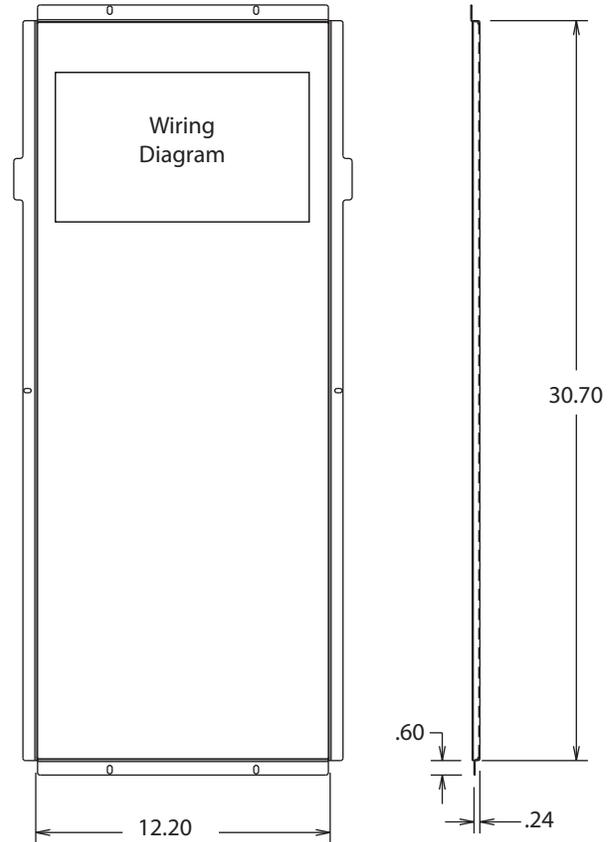

22. Replace the acoustical RA block-off panel (Figure 3) make sure that the air travels correctly through the new unit's coil, to achieve optimal performance.
23. If there is a top supply, (normally front/side) make the plenum connection through the top opening of the new chassis (Figure 4). Be sure to cut and remove the insulation that covers the top supply opening.

SECTION TWO — Product Line Specific Demolition & Installation, Cont'd.

Figure 4. Top Opening



24. If there is a side/front supply, install the supply air grille(s) into the painted, top supply-grille transition panel (Figure 6). For top supply only, install the painted top blank-off panel instead (Figure 5).

Figure 5. Top Blank-off Panel


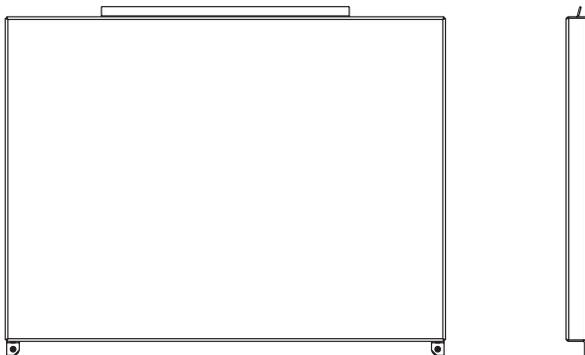


Figure 6. Top Supply Grille Transition Panel

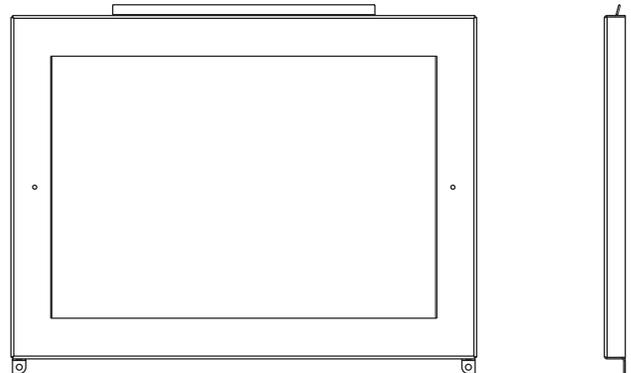

25. Attach the louvered, return-air deco panel to the new chassis, using both of the 5/16" hex cam-locks.
26. Installation complete. Clean up work area.

Submittals and product literature detailing unit operation, controls, and connections should be thoroughly reviewed **BEFORE** beginning the connection and testing of risers and piping.

To assure optimal unit performance, the supply connection(s) are marked on the unit's coil with an "S" meaning supply or inlet and "R" meaning return or outlet indicating flow direction to and from the coil. Blue letters mark the chilled water connections and red letters mark the hot water connections.


Modular Hi-Rise Replacement Series – MIY

INSTALLATION, OPERATION, & MAINTENANCE MANUAL

SECTION TWO — Product Line Specific Demolition & Installation, Cont'd.

Riser to Unit Installation

Figure 7. Riser Connection

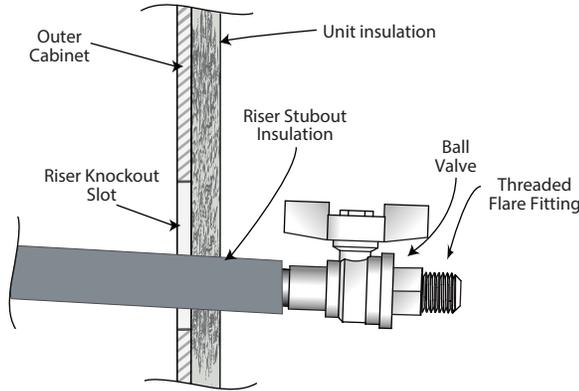

Before making the riser joints, the riser insulation must be pulled back away from the joint and protected from heat during the brazing process. This operation is the responsibility of the installer. The riser joint solder material must be selected to withstand the total operating pressure (both static and pumping head) to which the system will be subjected. Low temperature lead alloy solders such as “50/50” and “60/40” are normally not suitable.

Figure 8. Connecting Unit



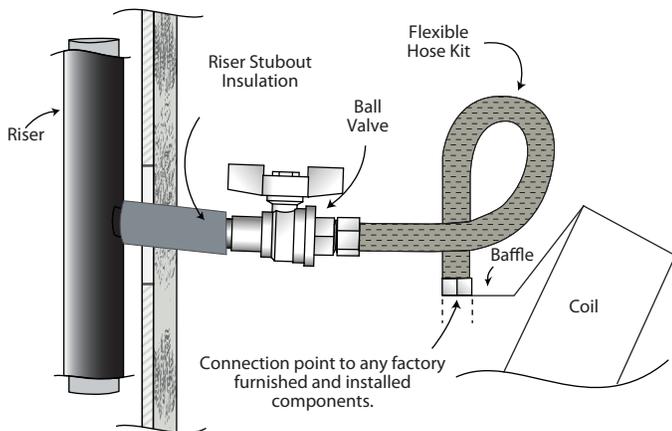


Figure 9.

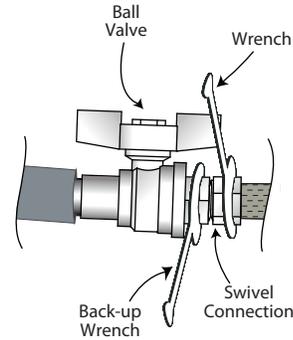

Riser to Drain Installation

Figure 10.

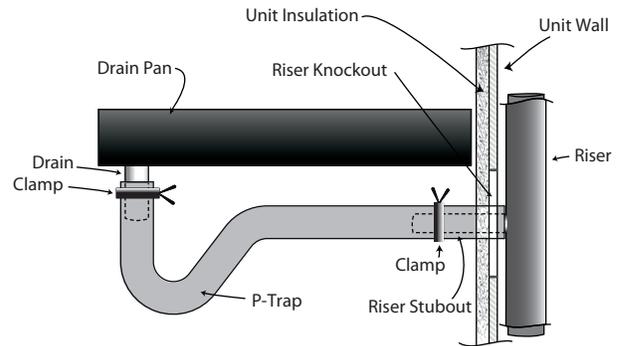

1. After the applicable Supply, Return, and Drain pipe knockouts have been removed, carefully position the unit so that the riser ball valves penetrate into the unit through the riser knockouts making sure the insulation penetrates into the unit as shown in Figure 8, Figure 9, and Figure 10.
2. Before anchoring the equipment in place, the unit must be leveled and the cabinet must be plumb and squared.

The unit may be anchored in place by bolting directly through the unit floor or attaching the new chassis to the existing cabinet in some location that will not interfere with drywall or other items such as the supply grille, thermostat, or return access panel. When attaching the replacement chassis to the old cabinet, care must be taken to not penetrate the cabinet in locations

SECTION THREE — Finishing Installation

that may damage internal components or wiring. The mounting technique is a matter of choice; however, the unit should always be anchored securely to prevent movement during construction and riser expansion, contraction, and accidental contact.

After anchoring the new unit, it is then ready for the various service connections to be made such as riser and electrical connections.

4. All **MINIReStoraMOD™** units use reinforced braided stainless steel flexible hose kits for piping between existing risers and unit water coils as shown in Figure 8. The hose kit design has threaded connections on each end. The hose kits allow for riser fluctuations due to thermal expansion.
5. Use a wrench to tighten the swivel connections. Use a backup wrench to hold the riser ball valve stationary to prevent it from bending or twisting during installation as shown in Figure 9. Be careful to not over tighten swivel connections.
6. Locate the unit's coil unions, bracketed at the top of the coil assembly.
7. The plastic flare caps on the end of the coil fitting should be removed and discarded.
8. Use a wrench to tighten the swivel connections. Be careful to not over tighten swivel connections.
9. Locate the rubber p-trap drain hose, factory installed to the drain pan connection in the bottom of the unit as shown in Figure 10.
10. Push the rubber drain hose over the riser drain stub-out. Be careful that you do not bend the drain stub-out.
11. Adjust the hose clamp over the riser stub-out and rubber hose to hold in place as shown in Figure 10.
12. Test for leaks. Any and all leaks should be repaired before proceeding with installation. When testing with air or some other gas, it might be necessary to tighten stem packing nuts on some valves to

maintain air pressure in the riser. Pressure testing risers with water should be done with the unit service valves closed to prevent flushing debris into the unit valve packages. All leaks should be repaired before proceeding with the unit installation.

13. After system integrity has been established, the riser insulation must be pulled back into place over the joint and glued or sealed to prevent sweating and heat loss or gain. All of the risers including the riser stub-outs should be properly covered with insulation. Internally mounted chilled water piping and valves are located over the drain pan and need not be insulated.

It is the responsibility of the installer to make sure that an isolation valve is installed between each supply and return piping connection to the unit.

SECTION THREE – Finishing Installation

Grille/Ductwork Installation

All ductwork and/or supply and return grilles should be installed in accordance with the installation instructions and project specifications. If not included on the unit or furnished from the factory, supply and return grilles should be provided as recommended in the product catalog.

NOTE: Refer to CAUTION and WARNING on page 2 (inside front cover) of this catalog.

The safest method of freeze protection is to use glycol in the proper percent solution for the coldest expected air temperature.

Electrical Connections

The unit serial plate lists the unit electrical characteristics such as the required supply voltage, fan and heater amperage and required circuit ampacities. The unit wiring diagram shows all unit and field wiring. Since each project is different and each unit on a project may be different, the installer must be familiar with the wiring diagram and serial plate on the unit BEFORE beginning any wiring. The unit electrical power supply and entry location

SECTION FOUR — Start-Up

was selected during order entry. By default, the unit is designed to allow for electrical supply wiring to be pulled directly through the side of the cabinet into the circuit breaker box.

All components furnished for field installation by either the factory or the controls contractor should be located and checked for proper function and compatibility. All internal components should be checked for shipping damage, and any loose connections should be tightened to minimize problems during start-up.

Any devices such as fan switches or thermostats that have been furnished from the factory for field installation must be wired in strict accordance with the wiring diagram that appears on the unit. Failure to do so could result in personal injury or damage to components, and will void all manufacturer's warranties.

The fan motor should never be controlled by any wiring or device other than a properly selected thermostat, without factory authorization. Fan motor(s) may be temporarily wired for use during construction only with prior factory approval in strict accordance with the instructions issued at that time.

Exposed Unit Touch-up and Repainting

Quick finish wall panel kits may be furnished with a thermally-bonded powder-coated finish. Small scratches in this finish may be repaired with touch-up paint available from the factory. Some colors of touch-up paint are available in aerosol containers and all standard touch-up paint is available in pint, quart, and gallon cans. Contact the factory for availability.

When repainting a surface, the finish should be prepared by light sanding with #280 grit sand paper or #000 or #0000 fine steel wool. The surface may also be wiped with a liquid surface etch cleaning product. These items should be available at most paint product stores. It should be noted that the more conscientiously this preparation is done, the more effective it will be.

After this preparation is accomplished, the factory finish should provide excellent adhesion for a variety of air-dried top coats. Enamel will give a more durable, higher gloss

finish, while latex will not adhere as well and will give a dull, softer finish.

Factory aerosol touch-up paint may require a number of light "dust coats" to isolate the factory-baked enamel finish from the quick drying touch-up paint.

SECTION FOUR – Start-Up

Operating Conditions

Coil:

Maximum Operating Pressure – 250 psi

Maximum inlet water temperature – 180°F (heating)

Fan:

Operates at minimum of 90% rated voltage

Consult rating software for maximum external static

Max ESP for MIY with electric heat – 0.20" wg on High/

Medium speeds and 0.12" wg on Low speed.

Before beginning any start-up operation, the start-up personnel should familiarize themselves with the unit, options and accessories, and control sequence to understand the proper system operation. All personnel should have a good working knowledge of general start-up procedures and have the appropriate start-up and balancing guides available for consultation.

The initial step in any start-up operation should be a final visual inspection. All equipment, plenums, duct-work, and piping should be inspected to verify that all systems are complete and properly installed and mounted, and that no debris or foreign articles such as paper or drink cans are left in the units or other areas.

Each unit should be checked for loose wires, free blower wheel operation, and loose or missing access panels or doors. Except as required during start-up and balancing operations, no fan coil units should be operated without all the proper ductwork attached, supply and return grilles in place, and all access doors and panels in place and secure. A clean filter of the proper size and type must also be installed. Failure to do so could result in damage to the equipment or building and furnishings and/or void all manufacturer's warranties.

SECTION FOUR — Start-Up, Cont'd.

Cooling/Heating System

Prior to the water system start-up and balancing, the chilled/hot water systems should be flushed to clean out dirt and debris which may have collected in the piping. During this procedure, the system should be flushed from the supply riser to the return riser through a cross-over loop at the end of the riser column, and all unit service valves must be in the closed position. This prevents foreign matter from entering the unit and clogging the valves and metering devices. Strainers should be installed in the piping mains to prevent this material from entering the units during normal operation.

During system filling, air venting from the unit is accomplished by the use of the standard, manual air vent fitting, or the optional, automatic air vent fitting installed on the coil. Venting can be accomplished by depressing the needle valve core. Automatic air vents may be unscrewed one turn counterclockwise to speed initial venting, but should be screwed in for automatic venting after start-up operations.

Air System Balancing

All duct stubs, grilles, filters, and return-access panels must be properly installed to establish actual system operating conditions **BEFORE** beginning air balancing operations.

Each individual unit and the attached ductwork is a unique system with its own operating characteristics. For this reason, air balancing is normally done by balance specialists who are familiar with all procedures required to properly establish air distribution and fan-system operating conditions. These procedures should not be attempted by unqualified personnel.

Units with no ductwork have air volumes predetermined at the factory by supply grille size and normally do not require air balancing other than selecting the desired fan speed. Units furnished with optional dampers on supply grilles may require some small adjustments to “fine tune” the air delivery to each grille.

After proper system operation is established, the actual unit air delivery and the actual fan motor amperage draw for each unit should be recorded in a convenient place for future reference.

ECM Blower

The standard motor/blower assembly offered is an Electronically Commutated Motor and the brushless DC blower is controlled by a 3-speed potentiometer control board, or direct proportional (-10 VDC/4-20 mA) control from a compatible thermostat.

Modular Hi-Rise Replacement Series – MIY

INSTALLATION, OPERATION, & MAINTENANCE MANUAL


SECTION FOUR — Start-Up, Cont'd.

Motor Control Voltage – 3-Speed Relay Board – Factory Settings

Unit Model	# of Coil Rows	Unit Voltage	Pot Board Settings – VDC Values @ 0" ESP			CFM Values @ 0" ESP		
			High	Medium	Low	High	Medium	Low
MIY04	3	120V/1/60	6.37	5.29	3.65	386	303	203
MIY04	4	120V/1/60	6.28	5.21	3.63	380	301	202
MIY04	5	120V/1/60	6.28	5.21	3.63	374	297	199
MIY04	3	208V/1/60	7.23	5.85	4.14	384	302	201
MIY04	4	208V/1/60	7.12	5.82	4.20	375	297	200
MIY04	5	208V/1/60	7.41	6.00	4.20	378	300	198
MIY04	3	240V/1/60	6.85	5.59	4.14	387	303	210
MIY04	4	240V/1/60	6.89	5.67	4.13	379	302	203
MIY04	5	240V/1/60	7.04	5.80	4.25	384	307	208
MIY04	3	277V/1/60	7.15	5.82	4.14	389	309	203
MIY04	4	277V/1/60	7.04	5.78	4.22	377	300	207
MIY04	5	277V/1/60	7.05	5.85	4.25	380	303	205

- NOTES:
1. The above default settings are pre-programmed by the Factory for each cited application to ensure proper operation and adherence to published values.
 2. Each fan speed setting must NOT be reduced further than your application's cited "Low" value; otherwise the electric heater will not maintain sufficient airflow. This can result in frequent nuisance tripping of the thermal cut-out protection, which temporarily disables the electric heater.
 3. Increasing voltage settings beyond the cited application values will typically result in higher sound power values than what are published by the manufacturer.
 4. Please contact the Factory for special CFM or external static pressure applications.

Figure 11. 3-Speed Relay Board

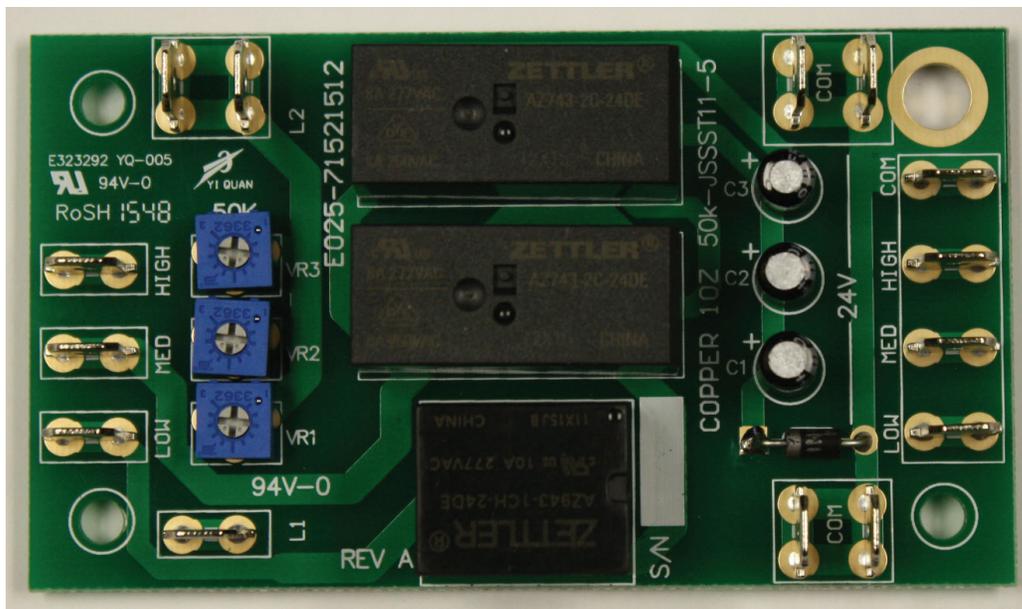

SECTION FOUR — Start-Up, Cont'd.

Motor Control Voltage – Proportional/Analog Thermostat Settings

Unit Model and Size	Total # of Coil Rows	Unit Voltage (V/PH/Hz)	Proportional/Analog T'stat Fan Speed Limits (VDC)		Tested CFM values at 0" ESP	
			Max	Min	High	Low
MIY04	3	120V/1/60	6.37	3.65	386	203
MIY04	4	120V/1/60	6.28	3.63	380	202
MIY04	5	120V/1/60	6.28	3.63	374	199
MIY04	3	208V/1/60	7.23	4.14	384	201
MIY04	4	208V/1/60	7.12	4.20	375	200
MIY04	5	208V/1/60	7.41	4.20	378	198
MIY04	3	240V/1/60	6.85	4.14	387	210
MIY04	4	240V/1/60	6.89	4.13	379	203
MIY04	5	240V/1/60	7.04	4.25	384	208
MIY04	3	277V/1/60	7.15	4.14	389	203
MIY04	4	277V/1/60	7.04	4.22	377	207
MIY04	5	277V/1/60	7.05	4.25	380	205

- NOTES:**
1. The above minimum and maximum settings must be field-programmed into the proportional fan thermostat to ensure proper operation and adherence to published values.
 2. The minimum voltage settings must NOT be reduced further; otherwise, the electric heater will not maintain sufficient airflow. This can result in frequent nuisance tripping of the thermal cut-out protection, which temporarily disables the electric heater.
 3. Increasing voltage settings of High fan speed may result in higher sound power values than what are published by the manufacturer.
 4. Please contact the Factory for special CFM or external static pressure applications.

Figure 12. Proportional Fan Thermostat



Nepronic thermostat offered
by manufacturer
(Field Programmed)

SECTION FOUR — Start-Up, Cont'd.

Water Treatment

Proper water treatment is a specialized industry. IEC recommends consulting an expert in this field to analyze the water for compliance with the water quality parameters listed below, and to specify the appropriate water treatment regimen. The expert may recommend typical additives such as rust inhibitors, scaling preventative, antimicrobial growth agents, or algae preventatives. Anti-freeze solutions may also be used to lower the freezing point.

IEC water coil tubes and headers are constructed of copper. Multiple brass alloys may be present in the valve package, depending on unit configuration. It is the user's responsibility to ensure the tube and piping materials furnished by IEC, are compatible with the treated water.

Water Containing	Required Concentration
Sulphate	Less than 200 ppm
pH	7.0 – 8.5
Chlorides	Less than 200 ppm
Nitrate	Less than 100 ppm
Iron	Less than 4.5 mg/l
Ammonia	Less than 2.0 mg/l
Manganese	Less than 0.1 mg/l
Dissolved Solids	Less than 1000 mg/l
CaCO ₃ Hardness	300 - 500 ppm
CaCO ₃ Alkalinity	300 - 500 ppm
Particulate Quantity	Less than 10 ppm
Particulate Size	800 micron max

Water System Balancing

A complete knowledge of the hydronic system, along with its components and controls, is essential to proper water system balancing. This procedure should not be attempted by unqualified personnel. The system must be complete, and all components must be in operating condition **BEFORE** beginning water system balancing operations.

Each hydronic system has different operating characteristics depending on the devices and controls used in the system. The actual balancing technique may vary from one system to another.

After the proper system operation is established, the appropriate system operating conditions such as various water temperatures and flow rates should be recorded in a convenient place for future reference.

Before and during water system balancing, conditions may exist due to incorrect system pressures which may result in noticeable water noise or undesired valve operation. After the entire system is balanced, these conditions will not exist on properly designed systems.

Controls Operation

Before proper control operation can be verified, all other systems must be operating properly. The correct water and air temperatures must be present for the control function being tested. Some controls and features are designed to not operate under certain conditions. For example, on a two-pipe cooling/heating system with auxiliary electric heat, the electric heater cannot be energized with hot water in the system.

A wide range of controls, electrical options and accessories may be used with the equipment covered in this manual. Consult the approved unit submittals, order acknowledgements, and other literature for detailed information regarding each individual unit and its controls. Since controls and features may vary from one unit to another, care should be taken to identify the controls used on each unit and their proper control sequence. Information provided by component manufacturers regarding installation, operation, and maintenance of their individual controls is available upon request.

When changing from one mode to another (cooling to heating or heating to cooling), it may take some time to actually notice a change in the leaving air temperature. In addition, some units may be designed for a very low air temperature rise in heating. Before declaring a unit inoperative or a component defective, it may be necessary to verify operation by more than one method.

SECTION FIVE — Routine Maintenance

SECTION V – Routine Maintenance

Each unit on a job will have its own unique operating environment and conditions which may dictate a maintenance schedule that differs from other units on a job. A formal schedule of regular maintenance and an individual unit log should be established and maintained. This will help to achieve the maximum performance and service life of each unit on the job.


Information regarding safety precautions contained in the preface at the beginning of this manual should be followed during any service and maintenance operations. For more detailed information concerning service operations consult your sales representative or the factory.

Motor/Blower Assembly

The type of fan operation is determined by the control components and their method of wiring. This may vary from unit to unit. Refer to the wiring diagram that is attached to each unit for that unit's individual operating characteristics.

All motors have permanently lubricated bearings. No field lubrication is required.

Figure 13. Motor Blower Slide Out

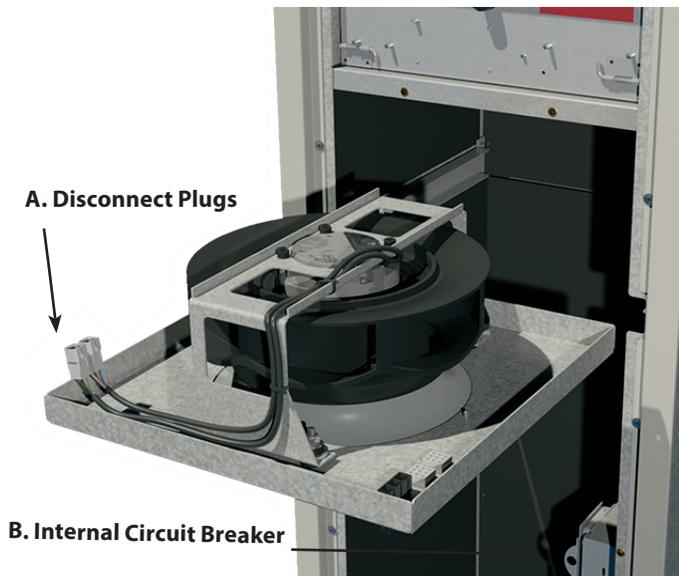

Should the assembly require more extensive service, it is designed to slide-out of the unit and be removed from the unit, if necessary, by disconnecting plugs (see A shown in Figure 13). Remember to turn off the power to the unit and lockout the internal circuit breaker of the unit (see B also shown in Figure 13) prior to performing any service.

Periodic cleaning of all components exposed to the unit air stream is recommended.

Coils

Coils may be cleaned by removing the filter and brushing the entering airflow coil face between fins with a stiff brush. Care should be taken to not damage coil fins. Brushing should be followed by cleaning with a vacuum cleaner. If a compressed air source is available, the coil may also be cleaned by blowing air through the coil fins from the leaving air face. This should again be followed by vacuuming. Units provided with the proper type of air filters, replaced regularly, will require less frequent coil cleaning. Take care not to damage or fold coil fins, which would cause diminished performance.

Figure 14. MIY Coil



If more extensive coil service is required, the coil can easily be removed from the unit by removing the coil component as shown in Figure 14.

SECTION FIVE — Routine Maintenance, Cont'd.

Electric Resistance Heater Assembly

Electric resistance heaters typically do not require periodic maintenance when unit air filters are changed properly. The operation and service life may be affected by other conditions and equipment in the system. The two most important operating conditions for an electric heater are proper air flow and proper supply voltage. High supply voltage and/or poorly distributed or insufficient air flow over the element will result in element overheating. This condition may result in the heater cycling on the high-limit thermal cutout. The high-limit thermal cutout device is a safety device only and is not intended for continuous cycling. With proper unit application and operation, the high-limit thermal cutout will not operate. This device only operates when a problem exists, and ANY condition that causes high-limit cutout MUST be corrected immediately. High supply voltage also causes excessive amperage draw and may trip the circuit breaker or blow the fuses on the incoming power supply.

After proper air flow and supply power are assured, regular filter maintenance is important to provide clean air over the heater. Dirt that is allowed to deposit on the heating element will cause hot spots and eventual element burn through. These hot spots will normally not be enough to trip the high-limit thermal cutout device and may not be evident until actual heater element failure.

Electrical Wiring and Controls

The electrical operation of each unit is determined by the components and wiring of the unit. This may vary from unit to unit. Consult the wiring diagram attached to the unit for the actual type and number of controls provided on each unit.

The wiring diagram is affixed to the acoustical RA block-off panel inside the unit. It is visible when the return air panel is removed.

The wiring and controls are accessible through the flip-down control box door (see Figure 15) located above the motor/blower assembly. The door is also designed to be removable by disengaging the spring-loaded pins found on either side of the lower portion of the door.

Figure 15. Control Box Door



The integrity of all electrical connections should be verified at start-up. Afterwards, all controls should be inspected regularly for proper operation. Some components may experience erratic operation or failure due to age. Wall thermostats may also become clogged with dust and lint and should be periodically inspected and cleaned to provide reliable operation.

When replacing any components such as fuses, circuit breakers, or relays, use only the exact type, size and voltage component as furnished from the factory. Any deviation without factory authorization could result in personal injury or damage to the unit. This will also void all factory warranties. All repair work should be done in such a manner as to maintain the equipment in compliance with governing codes, ordinances and agency listings.

Valves and Piping

No formal maintenance is required on the valve-package components most commonly used with fan coil units other than a visual inspection for possible leaks in the course of other normal periodic maintenance. In the event that a valve should need replacement, the same precautions taken during the initial installation to protect the valve package from excessive heat should also be used during replacement.

SECTION FIVE — Routine Maintenance, Cont'd.

Filters, Throwaway (including MERV)

The throwaway filter should be replaced on a regular basis. The time interval between each replacement should be established based on regular inspection of the filter and should be recorded in the log for each unit. Refer to the product catalog for the recommended filter size for each product type and size. If the replacement filters are not purchased from the factory, the filters used should be the same type and size as those furnished from or recommended by the factory. Consult the factory for applications using filter types other than the factory standard or optional product. When a filter with a higher level of filtration is used, the more frequently that filter needs to be changed to maintain performance.

Filters, Permanent

A maintenance schedule for permanent filters should be developed in the same manner as throwaway filters. Unlike throwaway filters, permanent filters may be cleaned and re-installed in the unit instead of being discarded when dirty. The optional factory permanent filter may be cleaned in hot soapy water to remove any trapped dirt. It should then be set aside on edge to dry. Before replacing the filter in the unit, it should be recharged with some type of entrapment film such as “Film-Cor Recharging Oil.” The filter should be sprayed on both sides or submerged in the film to assure complete coverage. The filter should not be allowed to soak in the film, but should be immediately removed and the excess film drained from the filter before re-installation in the unit. Consult a local filter supplier for types of available cleaning solutions and charging films.

It should be noted that permanent filters normally have less static pressure loss than throwaway filters.

Drain

The drain should be checked before initial start-up and at the beginning of each cooling season to assure that the drain trap and riser are clear. If it is clogged, steps should be taken to clear the debris so that condensate will flow easily.

Periodic checks of the drain should be made during the cooling season to maintain a free-flowing condensate. Should the growth of algae and/or bacteria be a concern, consult a HVAC supply organization familiar with local conditions, for chemicals or other solutions available to control these agents.

SECTION FIVE — Routine Maintenance, Cont'd.

Replacement Parts

OEM replacement parts should be used wherever possible to maintain unit performance, its normal operating characteristics, and the testing agency listings. Replacement parts may be purchased through a local sales representative which may be found by using the Rep Locator tab on the IEC website (www.iec-okc.com).

Contact the local sales representative or the factory before attempting any unit modifications. Any modifications not authorized by the factory could result in personal injury, damage to the unit, and could void all factory warranties. When ordering parts, the following information must be supplied to ensure proper part identification:

- (1) Complete unit model number
- (2) Unit serial number
- (3) Unit hand connection (right or left hand)
- (4) Complete part description including any numbers

On warranty replacements, in addition to the information previously listed, the unit shipping code which appears on the upper right-hand corner of the serial plate is required. Contact the factory for authorization to return any parts, such as defective parts replaced in warranty. All shipments returned to the factory must be marked with a Return Authorization Number, which is provided by the factory.

All equipment and components sold through the Parts Department are warranted under the same conditions as the standard manufacturer's warranty with the exception that the warranty period is twelve (12) months, unless the component is furnished as a warranty replacement. Parts furnished as warranty replacements are warranted for the remaining term of the original unit warranty, or not less than thirty (30) days.

Please refer to the Factory website for a general Service-Parts Manual. Unit-specific parts can be identified by your local IEC sales representative by using the "Replacement Parts" QR code label on the unit with a smartphone app, or by directly contacting the factory (405-605-5000).

SECTION SIX — Checklists

Receiving and Inspection

- Unit received undamaged
- Unit received complete as ordered
- “Furnish only” parts accounted for
- Unit arrangement/hand correct
- Unit structural support complete and correct

Handling and Installation

- Unit mounted level and square
- Proper access provided for unit and accessories
- Proper electrical service provided
- Proper overcurrent protection provided
- Proper service switch/disconnect provided
- Proper chilled water line size to unit
- Proper hot water line size to unit
- All services to unit in code compliance
- All shipping screws and braces removed
- Unit protected from dirt and foreign matter

Cooling/Heating Connections

- Protect valve package components from heat
- Piping connected to unit
- Pressure test all piping for leaks
- Install drain line and traps, as required
- Insulate all piping, as required
- Risers have been connected to unit coil valve package

Ductwork Connections

- Install ductwork, fittings and grilles, as required
- Flexible duct connections at unit
- Proper supply and return grille type and size
- Control outside air for freeze protection
- Insulate all ductwork, as required

Electrical Conditions

- Refer to unit wiring diagram
- Incoming power service or services are connected
- Install and connect “furnish only” parts which have not been factory installed

Unit Start-Up

- General visual unit and system inspection
- Check for proper fan rotation
- Record electrical supply voltage
- Check all wiring for secure connections
- Close all unit isolation valves
- Flush water systems
- Fill systems with water/refrigerant
- Vent water systems, as required
- All ductwork and grilles in place
- All unit panels and filters in place
- Start fans, pumps, chillers, etc.
- Check for overload conditions of all units
- Check all ductwork and units for air leaks
- Balance water systems, as required
- Balance air systems, as required
- Record all final settings for future use
- Check piping and ductwall for vibration
- Check all dampers for proper operation
- Verify proper cooling operation
- Verify proper heating operation
- Reinstall all covers and access panels
- Verify proper condensate drainage

Recommended Spare Parts (per 10 units)

- Circuit Breaker
- 3-speed relay board (if not proportional)
- Motorized Control Valve Body and Actuator
- Blower Deck Assembly (Quick Swap)
- Motor-blower Assembly
- Electric Heater Assembly
- Heater Limit Switch
- Low Volt Control Fuse and Holder
- Condensate Float Switch
- Hose Kit (24” hoses)
- Transformer
- Relays (Standard and/or Solid State)
- Supply and Return Combo Valves
- Filters (1/unit)
- Primary Control Door Assembly (Quick Swap)
- Line Volt Control Door Assembly (Quick Swap, if present)
- Coil Assembly (Quick Swap)

Modular Hi-Rise Replacement Series – MIY

INSTALLATION, OPERATION, & MAINTENANCE MANUAL

TERMS AND CONDITIONS

- Orders shall not be binding upon International Environmental Corporation, an Oklahoma corporation (hereinafter referred to as "IEC") unless accepted by an authorized representative of IEC at its office in Oklahoma City, Oklahoma. No distributor, sales representative or any other person or entity (except authorized employees of IEC at its office in Oklahoma City, Oklahoma) has any authority whatsoever to bind IEC to any representation or agreement of any kind.
- IEC does not build items to plans and specifications. IEC agrees to furnish only the items as described in IEC's acknowledgment unless IEC's office in Oklahoma City, Oklahoma has previously received and accepted, in writing, approved submittals from Purchaser.
- Prices acknowledged are firm only if Purchaser releases the goods covered by this order for immediate production by IEC within sixty (60) days from the date of Purchaser's initial offer to purchase and for shipment by IEC within IEC's estimated shipping date, unless otherwise agreed to in writing by IEC at its office in Oklahoma City, Oklahoma. If Purchaser does not meet the terms and conditions of this paragraph, the prices are subject to escalation to those prices in effect at time of shipment without notice to Purchaser.
- All prices are F.O.B. IEC's factory, unless otherwise agreed by IEC in writing; and, all payments and prices shall be in U.S.A. dollars.
- If goods are released for production but IEC is prevented by the Purchaser from shipping upon completion or by IEC's estimated shipping date, whichever is later, IEC may at its option, in addition to all other remedies, invoice Purchaser to be payable within thirty (30) days and store the goods at Purchaser's sole expense.
- Title to and risk of loss to the goods passes to the Purchaser F.O.B. IEC's factory.
- Disclaimer**
It is expressly understood that unless a statement is specifically identified as a warranty, statements made by IEC or its representatives relating to IEC's products, whether oral, written or contained in any sales literature, catalog or any other agreement, are not express warranties and do not form a part of the basis of the bargain, but are merely IEC's opinion or commendation of IEC's products. **EXCEPT AS SPECIFICALLY SET FORTH HEREIN, THERE IS NO EXPRESS WARRANTY AS TO ANY OF IEC'S PRODUCTS. IEC MAKES NO WARRANTY AGAINST LATENT DEFECTS. IEC MAKES NO WARRANTY OF MERCHANTABILITY OF THE GOODS OR OF THE FITNESS OF THE GOODS FOR ANY PARTICULAR PURPOSE.**
- Grant of Limited Express Warranty**
IEC warrants IEC products purchased and retained in the United States of America and Canada to be free from defects in material and workmanship under normal use and maintenance as follows: (1) All complete fan coil units built or sold by IEC for twelve (12) months from date of unit start up or eighteen (18) months from date of shipment (from factory), whichever comes first.

All parts must be returned to IEC's factory in Oklahoma City, Oklahoma, freight prepaid, no later than sixty (60) days after the date of the failure of the part; if IEC determines the part to be defective and within IEC's Limited Express Warranty, IEC shall, when such part has been either replaced or repaired, return such to a factory recognized contractor or service organization, F.O.B. IEC's factory, Oklahoma City, Oklahoma, freight prepaid. The warranty on any parts repaired or replaced under warranty expires at the end of the original warranty period. For information and warranty service contact:

International Environmental Corporation
Customer Service
5000 West I-40
Oklahoma City, OK 73128
(405) 605-5000

This warranty does not cover and does not apply to: (1) Air filters, fuses, fluids; (2) Products relocated after initial installation; (3) Any portion or component of any system that is not supplied by IEC, regardless of the cause of the failure of such portion or component; (4) Products on which the unit identification tags or labels have been removed or defaced; (5) Products on which payment to IEC is or has been in default; (6) Products which have defects or damage which result from improper installation, wiring, electrical imbalance characteristics or maintenance; or are caused by accident, misuse or abuse, fire, flood, alteration or misapplication of the product; (7) Products which have defects or damage which result from a contaminated or corrosive air or liquid supply or operation at abnormal temperatures; (8) Mold, fungus or bacteria damages; (9) Products subjected to corrosion or abrasion; (10) Products manufactured or supplied by others; (11) Products which have been subjected to misuse, negligence or accidents; (12) Products which have been operated in a manner contrary to IEC's printed instructions; or (13) Products which have defects, damage or insufficient performance as a result of insufficient or incorrect system design or the improper application of IEC's products.

IEC is not responsible for: (1) The cost of any fluids or other system components, or associated labor to repair or replace the same, which is incurred as a result of a defective part covered by IEC's Limited Express Warranty; (2) The costs of labor, materials or service incurred in removal of the defective part, or in obtaining and replacing the new or repaired part; or, (3) Transportation costs of the defective part from the installation site to IEC or of the return of any part not covered by IEC's Limited Express Warranty.

Limitation: This Limited Express Warranty is given in lieu of all other warranties. If, notwithstanding the disclaimers contained herein, it is determined that other warranties exist, any such warranties, including without limitation any express warranties or any implied warranties of fitness for particular purpose and merchantability, shall be limited to the duration of the Limited Express Warranty.
- Limitation of Remedies**
In the event of a breach of the Limited Express Warranty, IEC will only be obligated at IEC's option to repair the failed part or unit or to furnish a new or rebuilt part or unit in exchange for the part or unit which has failed. If after written notice to IEC's factory in Oklahoma City, Oklahoma of each defect, malfunction or other failure and a reasonable number of attempts by IEC to correct the defect, malfunction or other failure and the remedy fails of its essential purpose, IEC shall refund the purchase price paid to IEC in exchange for the return of the sold good(s). Said refund shall be the maximum liability of IEC. THIS REMEDY IS THE SOLE AND EXCLUSIVE REMEDY OF THE BUYER OR THEIR PURCHASER AGAINST IEC FOR BREACH OF CONTRACT, FOR BREACH OF ANY WARRANTY OR FOR IEC'S NEGLIGENCE OR IN STRICT LIABILITY.
- Limitation of Liability**
IEC shall have no liability for any damages if IEC's performance is delayed for any reason or is prevented to any extent by any event such as, but not limited to: any war, civil unrest, government restrictions or restraints, strikes, or work stoppages, fire, flood, accident, shortages of transportation, fuel, material or labor, acts of God or any other reason beyond the sole control of IEC. **IEC EXPRESSLY DISCLAIMS AND EXCLUDES ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGE IN CONTRACT, FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, OR IN TORT, WHETHER FOR IEC'S NEGLIGENCE OR AS STRICT LIABILITY.**
- IEC shall have no system design, application or maintenance responsibility or responsibility for mold, fungus or bacteria to Purchaser or any other third party.
- All sales, goods and services, use, excise, value added, transportation, privilege, occupational consumption, storage, document, transaction or other taxes which may be levied by any taxing authority as a result of this transaction shall be paid by the Purchaser.
- Unless otherwise agreed to in writing by IEC any technical data furnished in conjunction with this order and not obtainable from another source shall not be duplicated, used, or disclosed in whole or in part for any purpose other than to evaluate this order.
- IEC shall have no liability or other obligation hereunder, if IEC's performance is delayed for any reason or is prevented to any extent by any event such as, but not limited to: any act of God, strike or work stoppage, fire, flood, accident, allocation, or other controls of Government authorities, shortages of transportation, fuel, material or labor, or any other cause beyond IEC's sole control. Any shipping date stated by IEC is IEC's best estimate but IEC makes no guarantee of shipment by any such date and shall have no liability or other obligation for failure to ship on such date, regardless of cause.
- Payment terms are net thirty (30) days from date of shipment on approved credit. One and one half percent (1 1/2%) per month (18% annual rate) may be charged on past due accounts or the highest rate permitted by applicable law, whichever is lesser. In the event the account is placed for collection, Purchaser shall be responsible for all reasonable attorneys fees or costs on a solicitor and client basis, plus all other costs and expenses incurred by IEC in securing payment.
- Purchaser shall not cancel the contract without prior written consent of an authorized representative of IEC at its offices in Oklahoma City, Oklahoma. In the event Purchaser cancels the contract with the prior written consent of IEC after the Purchaser's offer to purchase is received and acknowledged in writing, IEC shall be entitled to receive from Purchaser IEC's cost incurred to time of cancellation plus a reasonable allowance for overhead and profit.
- Purchaser shall not assign any of its interest or rights under this agreement without written consent of IEC.
- IEC will protect all its lien rights. IEC will not furnish lien waivers or releases until IEC receives payment, in full, at its office in Oklahoma City, Oklahoma from Purchaser for the goods covered by this order. There is no authorized retainage for any reason.
- This Agreement shall be construed, and the rights and liabilities of the parties hereunder shall be determined in accordance with the laws of the State of Oklahoma. If it shall be found that any portion of this agreement violates any particular law of the United States or any state in the United States having jurisdiction or, if applicable, any law of Canada or any province or territory in Canada having jurisdiction, such portion of the agreement shall be of no force and effect in that political unit, division or sub-division in which they are illegal or unenforceable and the agreement shall be treated as if such portion or portions had not been inserted. In the event that any dispute or disagreement in connection with any order should arise or exist between Purchaser and IEC, jurisdiction and venue for any legal action shall be, if IEC so elects, exclusively in the state or federal courts in Oklahoma County, Oklahoma. The statute of limitations on any claim of the Purchaser against the IEC shall be one (1) year from the date the cause of action accrues.
- Without regard to any other agreement, all obligations of Purchaser to IEC shall become immediately due and payable if Purchaser becomes insolvent or if Purchaser does not make payments when due or breaches any other agreement or fails to perform any obligation.
- All orders are expressly limited and made conditional upon acceptance by Purchaser of the terms and conditions set forth above without change. There shall be no understandings, agreements, or obligations (outside these terms and conditions) unless specifically set forth in writing and accepted by signature of an authorized representative of IEC in Oklahoma City, Oklahoma.
- The parties hereto have requested that these presents and all judicial proceedings relating thereto be drafted in English. Les parties aux présentes ont demandé à ce que les présentes et toutes procédures judiciaires y afférentes soient rédigées en anglais

Modular Hi-Rise Replacement Series – MIY

INSTALLATION, OPERATION, & MAINTENANCE MANUAL

This page intentionally left blank.

Modular Hi-Rise Replacement Series – MIY

INSTALLATION, OPERATION, & MAINTENANCE MANUAL



Contact your local IEC Sales Representative for further details and pricing applicable to this product. Visit our website (iec-okc.com) to find your local IEC Sales Rep.

IEC Part Number: I100-90023660
IOM-056 Revision 9 (9/2020)
©2016-2020 International Environmental Corporation (IEC)



5000 W. I-40 Service Rd.
Oklahoma City, OK 73128
P: 405.605.5000
F: 405.605.5001
www.iec-okc.com